






The following instructions show the recommended method for operating multi-zone blinds:
Images show INTU Micro product, instructions are relevant for ALL INTU multi-zone products

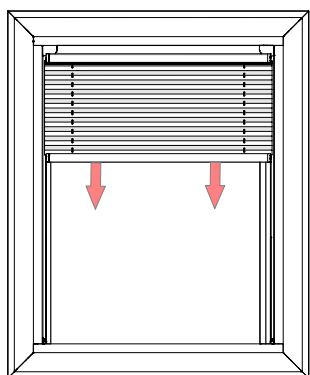


1. When operating multi-zone blinds it is important to ensure that the bar being moved is held straight at all times, failure to do this can result in the opposite bar moving on one side due to the nature of the cording system. It is recommended that the blind is held in 2 positions as indicated to ensure that it remains straight during operation.

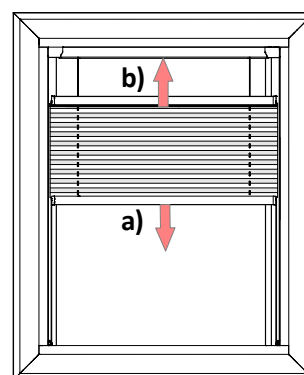

2. When fully closing blind, it is recommended that the bottom bar (a) is pushed fully down first and the top bar (b) is then pushed fully up.

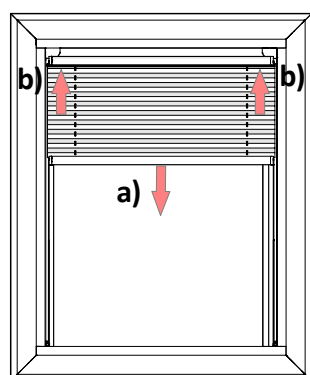

3. If top moving bar is already in the fully closed position and bottom bar (a) is pulled down, this will potentially cause the top bar to move down slightly. When this happens the top bar (b) needs to be readjusted back up.

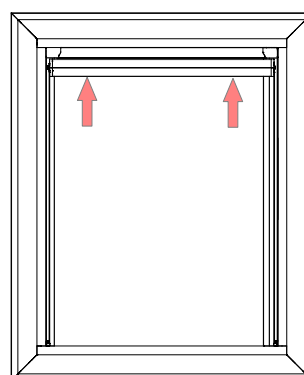

4. If operating bars need to be re-aligned it is best to position both bars in the fully raised position and push against the fixed headrail to re-align.

Additional Notes:

If excessive movement of any or both bars is evident this may be as a result of the level of tension applied to the blind. Adjustment of the tension may reduce excessive movement. See installation instructions for advice on how to adjust tension.