

Fitting Blind to PVC Frame


See overleaf for additional notes on; **Fitting Blinds to Timber Frames (TF)**



1. Fitting tools required include star point screwdriver, scissors, drill & Ø2.5mm drill bit. **(for TF see step b1 overleaf).**



2. Accessories pack (packing pieces as required).

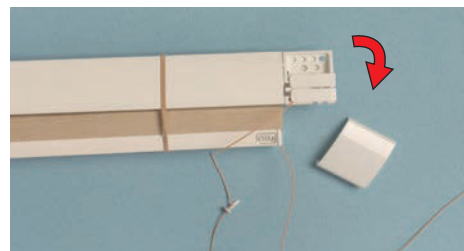


3. Unclip trimcap on both sides.



4. Using blind, mark positions for the cord grommet holes. **(for TF see step a1 overleaf).**




5. With the drill at 90° to the surface, drill 1 Ø2.5mm hole on each side.

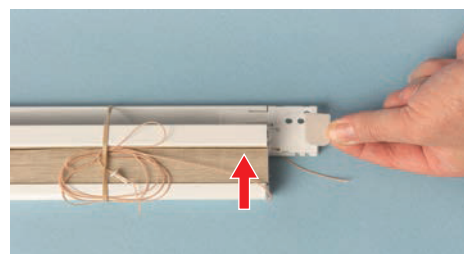

6. Attach double sided adhesive pad.



7. Stick blind onto frame leaving rubber band around blind.

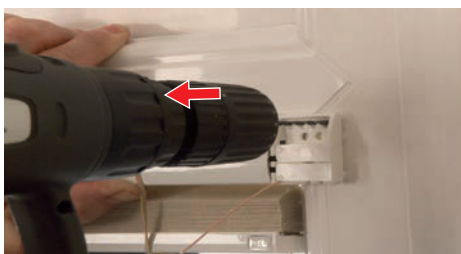

8. Drill 2 Ø2.5mm holes on each side.



9. Hand screw fixings. **(for TF see step a3 & a4 overleaf).**




10. Push cord knot into hole, push fixing grommet into hole, aligning groove to cord.



11. Holding button, pull cord tight to secure.




12. Remove rubber band. Carefully release locking gate. Pull cord to tension approx. equal on both sides.

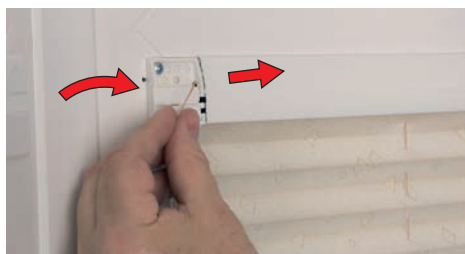

13. Press locking gate closed to secure cord. Cut-off excess cord leaving 100mm min. Tuck through hole in endcap.



14. Clip on trimcaps.

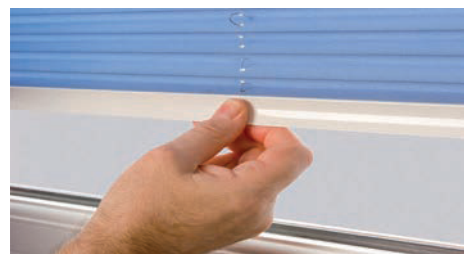

15. To align the bottomrail horizontally, simply pull it into the position desired. It will stay in position under tension from the cords.

Fitting Blind to Timber Frame



a1. Fitting tools required include Ø4mm drill bit and star point screwdriver.



a2. Mark position as outlined in step 4 (overleaf). Drill Ø4mm hole to depth of 10mm.
(cont. step 6 overleaf)



a3. Screw in brass inserts until flush with timber surface.



a4. Push cord knot into brass insert, push grommet into brass insert, aligning groove to cord.
(cont. step 11 overleaf).

THESE PRODUCTS ARE ALL CHILD SAFE BY DESIGN AND COMPLIANT WITH THE CHILD SAFETY REQUIREMENTS OF BS EN13120