


PERFECT FIT VISION® BLIND

SIDE CONTROL

Fitting Instructions



FITTING CORNER JOINTS

Assemble the bottom of a frame using 2 corner joints (R4026). Do this by sliding the joints into your frame section.

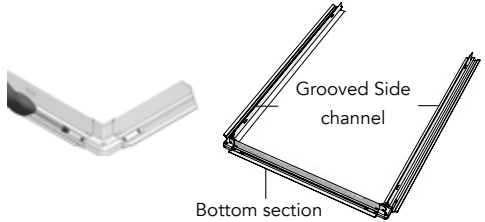

FITTING PUSH FIT CORNER JOINTS

**Screw holes have been retained for customers wanting to screw fit. Screws must be purchased separately (Part Code - 4099).

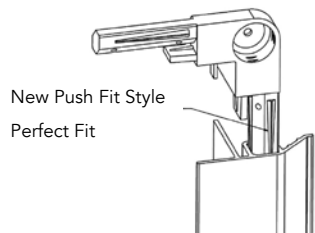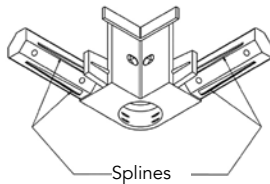

FINAL FRAME JOINT

Slide the curved aluminium frame into the idle corner joint.

The simplest way to do this is to slide the leg of the corner joint into the curved section.

Before the leg is all the way in, ensure that the bush on the corner joint lines up with the top tube.

BLIND ASSEMBLY

Slide the chain end joint in the opposite end.


Once assembled, slide the vision blind over the end set assembly until it will go no further.

FIXING THE CORD TIDY

Make sure the chain is through the corner cover. Pull the chain taut with cord tidy attached. Then mark the 2 holes on the side frame and drill 2mm holes, fix them with the screw provided and slide over the top section cover. Fix the other screw provided to hold the cord tidy together and push the cover over the hole.

Last of all, ensure that the blind end caps fit into side grooves.

Fit all corner joint covers into position and your blind is finished.

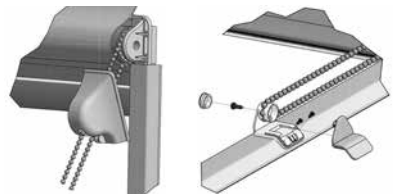

PERFECT FIT VISION® SIDE CONTROL

Fitting Instructions

FITTING PERFECT FIT


To ensure all brackets are in the correct position for fitting (85mm from beading) use a credit card in the corner of the window to locate the bracket position.

For ease of insertion, use a lubricant in the form of washing up liquid on the base of each bracket.

Line up the bracket with the base or top of the credit card (depending on which corner of the window you are working) and fit the bracket by pushing it between the glass and the rubber seal of the window.

Repeat for all 4 corners of the window, and intermediate brackets (if required) then clean excess lubricant prior to fitting the frame.

Line up bracket
with edge of card

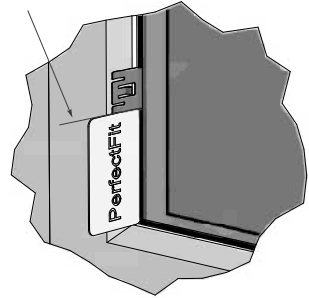

FITTING PERFECT FIT FRAME

Line up the holes in the frame with the brackets.

Firmly press the frame down onto each bracket. Fit one side at a time for an easier installation

